

COLORFUL NIGHTLIGHT

Alarm Clock

USER MANUAL

? Need help? Email:

NetzuService@outlook.com



Model: 5266B

6 MONTHS
RETURN

24 MONTHS
WARRANTY

LIFETIME
SUPPORT


OVERVIEW

Congratulations! Now you've got this Colorful Nightlight Alarm Clock.


The digital alarm clock features a novel interface, practical functions and a user-friendly design. A well-made alarm clock that meets the needs of home office use.

Please take time to read this manual to enjoy the convenience and features brought by this product.

DIAGRAM

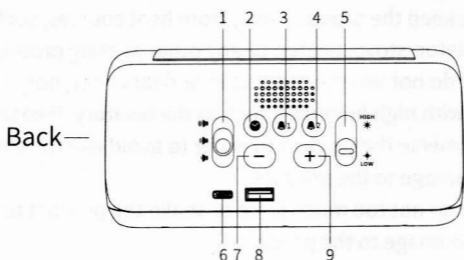

- | | |
|-----------------------------|-------------------------|
| 1. Volume Adjustment | 6. Type-C Charging Port |
| 2. Time Setting | 7. - |
| 3. Alarm 1 Setting | 8. USB-A Charging Port |
| 4. Alarm 2 Setting | 9. + |
| 5. Screen Brightness Dimmer | |

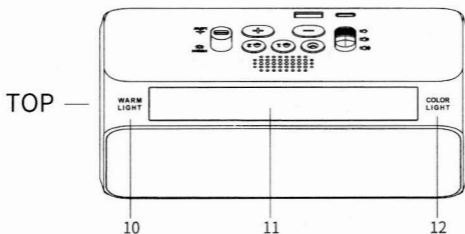


 

- | |
|---|
| 10. Warm Nightlight Adjustment Touch Button |
| 11. Snooze/Nightlight On/Off |
| 12. Colorful Nightlight Adjustment Touch Button |


POWER ON

Plug in the adapter and power cord, and connect the TYPE-C to 5V DC, to kick off its working mode.

TIME SETTING

1 Time Setting


Press and hold [] to set the time. When the "Hour" blinks, press [+] or [-] to adjust the hour. Then press [] and the "Minute" will blink, press [+] or [-] to adjust the minute and press [] to confirm.

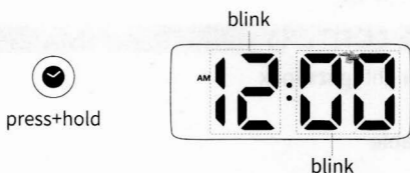

Note:

1. Press and hold [+] or [-] for quick time setting.
2. No operation for more than 10 seconds will automatically confirm the current setting and back to the time display.

2 12/24 Hour Time Format Switching

In normal time mode, press [] to convert the 12/24 hour time format.



Note:

For the 12-hour time format, AM/PM is displayed on the left.


For the 24-hour time format, AM/PM will not be displayed.

ALARM SETTING

1 Alarm 1 /2 Setting

Press and hold [🔔1] until "🔔1" and "Hour" blink, then press [+] or [-] to adjust the hour. Next, press [🔔1] and "Minute" will blink, then press [+] or [-] to adjust the minute and press [🔔1] to confirm.

The Alarm 2 setting is the same as Alarm 1.

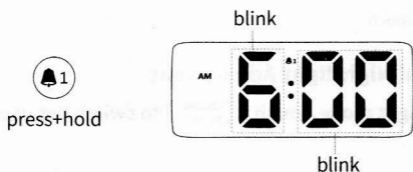

Note:

1. Press and hold [+] or [-] for quick alarm setting.
2. No operation for more than 10 seconds will automatically confirm the alarm setting and back to the time display.

2 Alarm Volume Adjustment

Toggle the alarm volume button to switch the volume from L01(low)- L02(medium)- L03(high). Please note that adjusting the volume while the alarm is sounding will turn off the alarm.



3 Nightlight On When Alarm Goes Off


When the alarm goes off, the corresponding alarm icon "🔔1" / "🔔2" will blink, the nightlight turns on automatically (even when the nightlight is off), and then turns off when the alarm sound stops.

4 Turn On/Off Alarm

Press [🔔1] or [🔔2] to turn on or off the corresponding alarm clock.

ON: [🔔1] or [🔔2] icon will be displayed on the screen.

OFF: [🔔1] or [🔔2] icon will disappear from the screen.

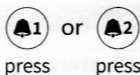

5 Turn Off The Sounding Alarm

When the alarm goes off, press any button except [Snooze/Nightlight] and 2 touch buttons on the top to stop the alarm. Such operation will not turn off the alarm set for the next day.


SNOOZE FUNCTION (Snooze Duration: 9 Minutes)

1 Turn On/Off Snooze Function

ON: When the alarm goes off, press [Snooze/Nightlight] to stop the alarm and start the snooze function, during which the "zzz" icon will blink. The alarm will ring again 9 minutes later and repeat 3 times if without operation.

When the alarm goes off and lasts for 3 minutes without any operation, it will enter into snooze mode automatically, and the snooze icon "zzz" will blink.

OFF: When in snooze mode, press any button except [Snooze/Nightlight] and 2 touch buttons on the top to turn off snooze mode with the snooze icon "zzz" disappearing on the interface. Such operation will not turn off the alarm set for the next day.

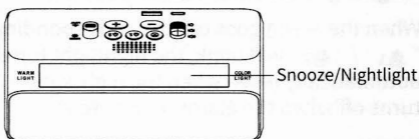

blink

SCREEN BRIGHTNESS ADJUSTMENT

1 Screen Brightness Adjustment

In any mode, push the brightness slider on the back to continuously adjust the screen brightness from 0% to 100%.



NIGHTLIGHT SETTING

1 Turn On/Off The Nightlight

In normal time mode, press [Snooze/Nightlight] to turn on or off the nightlight.

Note:

When turned on for the first time, the default light is a white color with middle brightness.


When turned on next time, the light will feature the color and brightness set last time.

2 Warm Nightlight Adjustment

In nightlight mode, touch [**WARM LIGHT**] to switch the warm nightlight brightness from high-medium-low.





touch

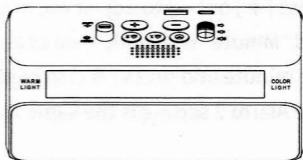

3 Colorful Nightlight Adjustment

In night light mode, touch [**COLOR LIGHT**] to switch between 8 colors.

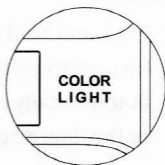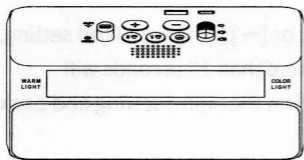

touch

POWER SUPPLY MODE AND EXTERNAL CHARGING FUNCTION

1. Plug in the Type-C power cord to kick off the normal working mode of the clock.
2. The clock has 1 USB-A output ports. It is recommended to use the original USB cable of phones or other devices, or the attached original adapter to connect to this clock for charging.
3. The included 1*CR2032 battery is adopted to power the internal clock circuit for the time memory function.

FACTORY MODE SETTING

Default time: AM 12:00

Default time format: 12-hour

Default alarm time: AM 6:00 (2 groups)

Default nightlight color: white

SPECIFICATIONS

Time errors: ± 30 seconds/month

Alarm: 2 groups

Battery type: 1*CR2032 battery (included)

Input power: 5V 1A

PACKAGE CONTENT

1* Colorful Nightlight Clock

1* Manual

1* Type-C Cable

1* Adapter

BATTERY WARNING

1. The product requires 1pcs CR2032 battery to keep the clock memory function. Please replace the battery if you find the memory function does not work.
2. Please do not put the battery in overheated environment, such as direct sunlight, fire etc.
3. Battery is not household waste! The expired battery must be discarded in a manner that is legal and environmentally friendly.
4. Please do not put the battery in your mouth, there is a risk of chemical combustion. If swallowed by mistake, get medical advice immediately.
5. Battery cannot be recharged or activated in other ways, nor can they be disassembled or thrown into the fire.
6. Keep new and used batteries away from children.

SAFETY INSTRUCTIONS

When using the product, your safety is of utmost importance. Please read and follow the following safety instructions carefully.

1. The manufacturer will not be responsible for the product damage caused by improper use or handling of the product.
2. Please use the factory standard power adaptor and cable that come with the product.
3. Please keep the product away from heat sources, such as radiator, stove, heater, or any other heating products.
4. Please do not use the product in or near water, nor in areas with high humidity, such as the lavatory. Please do not immerse the product in water to avoid electric shock and damage to the product.
5. Please do not too much force or shake the product to avoid damage to the product.
6. Please disconnect the power supply before cleaning the product. Do not use liquid cleaners, benzene, paint thinner or aerosol to clean the product.
7. Please do not wipe or scratch the screen with hard objects.