 


SPOT VACUUM CLEANER

TBC2413

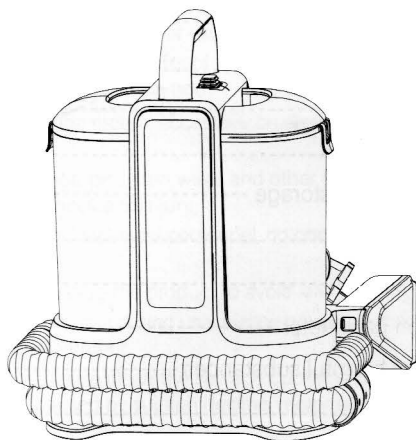

User manual

Please read the instructions before using this machine

Introduction

Dear users:

Thank you for using the spot cleaner, this manual is suitable for TBC2413 model, the content of the book is only for the user's use and maintenance reference, please contact the company's customer service department for consultation.

Catalogue

Matters needing attention	03
Product introduction	04
Installation and use	06
Cleaning and maintenance	08
Accessories assembly and storage	11
Fault analysis	12
Electrical diagram	12
Product specification parameter	13
Name and content of harmful substances	13
After-sales service	14

Matters need attention


Please read all safety precautions before using this product. Install the machine according to all the instructions and follow the steps in this manual. Any operation inconsistent with the instructions may result in damage to the product or serious personal injury. This product is only suitable for conventional household use, not suitable for industrial or outdoor use. Basic precautions should be followed when using electrical equipment, including the following:

- The product is not intended for use by persons with physical, sensory or intellectual impairments or persons lacking experience and common sense (including children) unless supervised or guided by a guardian to ensure that the product can be used in a safe condition;
- Do not immerse the product in water or liquid;
- Do not touch the plug or any live insulated part of the product with wet fingers to avoid the risk of electric shock;
- If the power cord is damaged, it must be replaced by the manufacturer, its maintenance department or a professional in a similar department in order to avoid danger;
- Keep airflow channels and moving parts of the product away from long hair, loose clothing, fingers and other parts of the body;
- Do not point the suction tube mouth, accessory brush head at the eyes, ears or put it in the mouth;
- Do not insert metal shavings, pins, iron wires and other items into the crevices of the product to avoid electric shock and injury;
- Other than professional and technical personnel, no one may disassemble, repair or transform the product;
- When not in use, please unplug the product to avoid leakage, fire, failure, etc.
- If the product is found abnormal during use, please power off immediately and call the company for after-sales treatment;
- After using this product, please clean the sewage bucket in time, keep the ventilation path smooth, avoid blocking caused by suction decline, motor heating, thus affecting the service life of the product;
- After using the machine, please put it in a dry place, do not fill the water box, so as not to affect the life of the machine;
- This product is suitable for local cleaning of various household products, such as sofas, mattresses, carpets, etc., which may not achieve the best use effect when used on other products;
- During the use of this product, the cleaning agent provided by our company or common in the world should be added in accordance with the prescribed ratio to prevent excessive foam, which may penetrate into the motor and lead to reduced life;
- When the product is running, please do not shake the machine from side to side to prevent sewage from entering the motor;
- A small amount of water remains in the machine, which is a normal phenomenon in the test;
- The technology and data reflected in all contents of this product manual are owned by the company or designated third-party testing institutions to obtain the final interpretation


Product introduction

● Part List

△ Note: Pictures for reference only, subject to our available products

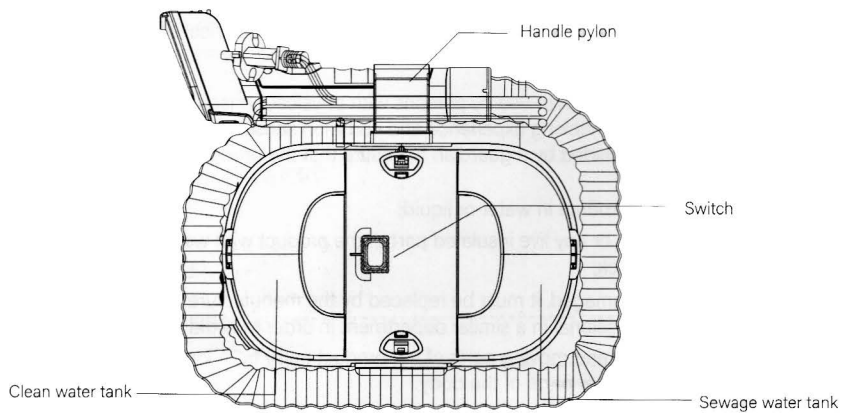


① Main Engine

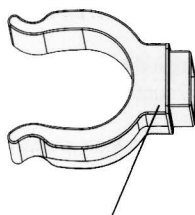


Handle pylon


②

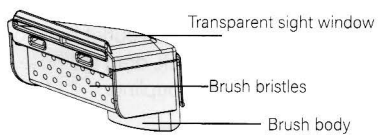

Small Spray Brush

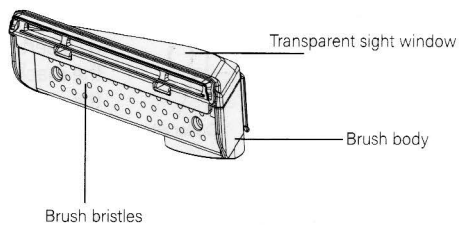


Big Spray Brush

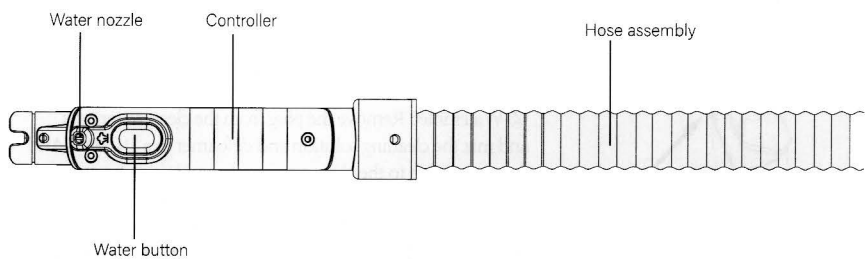

③ Spray handle assembly


Installation and use

●Product installation

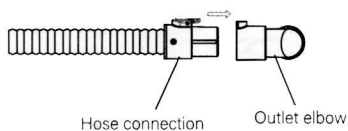


① Insert the hose connector into the outlet bend on the machine. After hearing the click, drag the hose in the reverse direction without decoupling.


●Clean water tank installation and disassembly

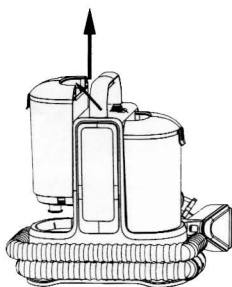

① Buckle the handle and lift the clean water tank up.

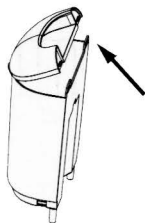


② Water inlet: Remove the plug from the clean water tank and mix the cleaning solution and defoamer in a 1:1 ratio. Add the proportion to the clean water tank, and inject clean water (below 50 °C) into the water level line. The recommended dosage of water, cleaning solution, and defoamer is 500ml of water. Add 1 bottle cap of cleaning solution and 1 bottle cap of defoamer. If the stubborn stain is large, it can be adjusted according to the actual situation. In the current situation, increase the proportion appropriately, seal the plug of the clean water tank tightly, and slightly shake the clean water. Mix the cleaning solution, defoamer, and water thoroughly in the box. Suggestions for different scenarios. Add different amounts of cleaning solution and do not use non specified cleaning solutions.

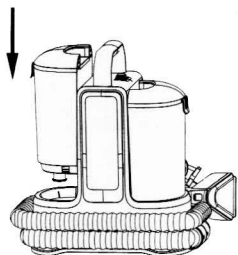


③ The water tank is installed to the whole machine, and the installation is successful after hearing the click sound.


- Turn on the machine

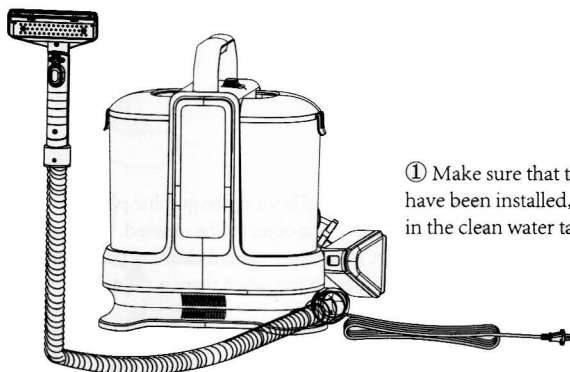


① Make sure that the clean water tank and sewage tank have been installed, and the brush head of the water hose in the clean water tank has been connected.

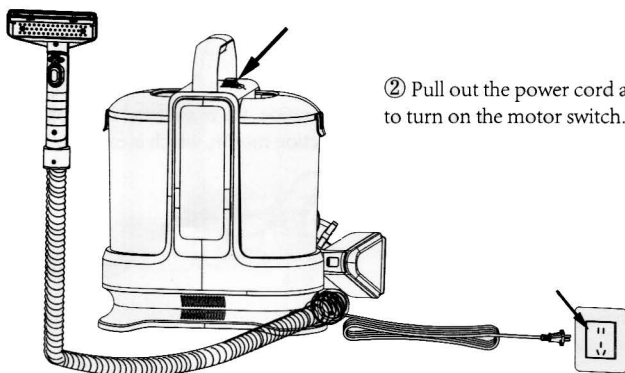

② Pull out the power cord and plug it into the home socket to turn on the motor switch.

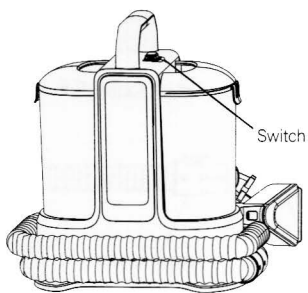


③ If the water does not spray for more than five minutes, turn off the water pump switch.

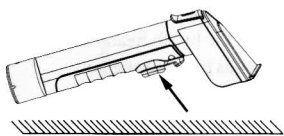


④ When the brush head is used, the graphic plane of the brush head is close to the object to be cleaned. Long press the water button, spray the required cleaning part repeatedly, and release the water button when there is no need to spray water .

Cleaning and maintenance


●Product installation

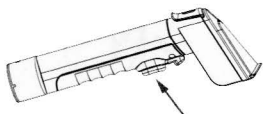

① Cleaning and maintenance of the machine Ensure that there is at least 500ml of water in the clean water tank. Press the self-water button shown in the figure for 30S to clean the brush head and hose.

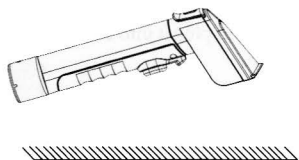


② During cleaning operation, the brush head is flat on the ground to block the suction mouth, which is easier to self-clean.

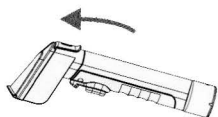

③ Push hard in the direction indicated by the arrow, and the brush head can be viewed.



④ If there are stains left in the transparent cover of the brush head, remove the transparent cover of the brush head and wash it under the faucet.

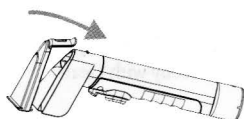


⑤ After cleaning, dry the transparent cover and put it into the brush head (install the bottom of the window first and then rotate the button in the direction shown).

● Sewage tank cleaning


⚠ Look out:

The lid must be tightened to prevent sewage seepage during use.


Before cleaning the machine, unplug the power cord, let the machine stop working, wipe the whole machine with a dry rag or a slightly wet rag.

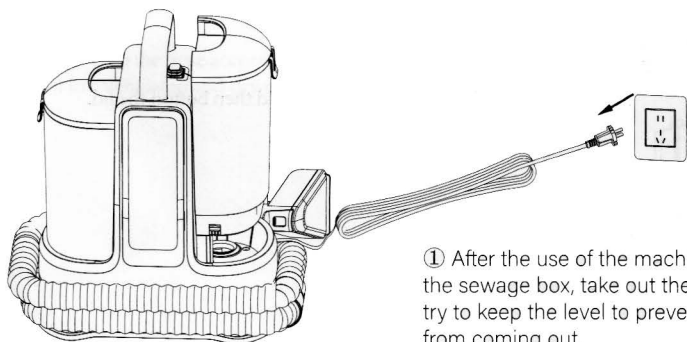


① After the use of the machine, pull the clasp of the sewage box, take out the sewage box, please try to keep the level to prevent the sewage box from coming out.

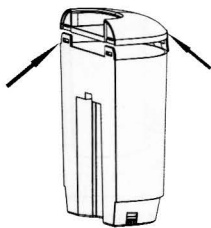

② Put the sewage tank into the sink, break the buckle, open the cover of the sewage tank, and dump the sewage.

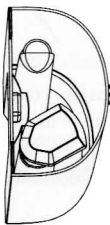


③ If the sewage box is dirty and not cleaned up, just take off the lid and clean it directly with clean water.

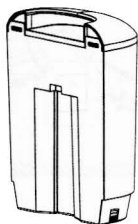

④ After cleaning, let dry, and then button the lid.

Accessories assembly and storage

△ Note: If the machine is not used for a long time, please drain the water in the water tank and hose to avoid odor caused by long time placement. The hose is coiled 2 times around the machine and the handle is stuck on the hose rack to avoid damage to the hose.

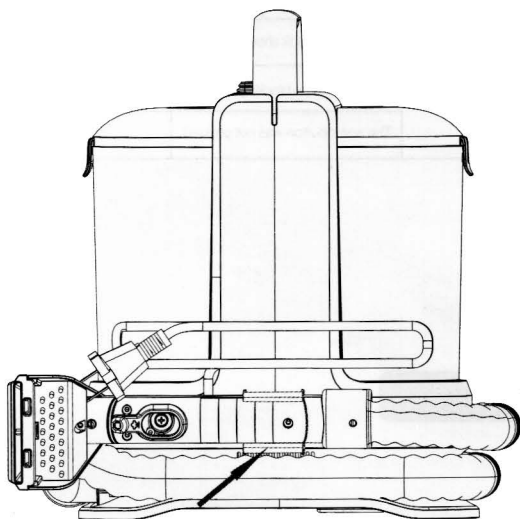


① Wrap the hose according to the figure, place the brush head in the position shown, and store it in a ventilated and dry place.

Fault analysis

Q&A	Possible cause	Solution
The suction of the brush head is weakened	The sewage tank is full	Please empty the sewage tank
	The machine is used for a long time	Power off and cool for 10 minutes before use
	Nozzle clogging	Check the pipe orifice for blockage and clean it
No water comes out of the nozzle	Water tank shortage	Please add some water
	Nozzle blocking	Please send it to the maintenance office for repair
	The water button was not pressed	Please press the water button


Electrical diagram

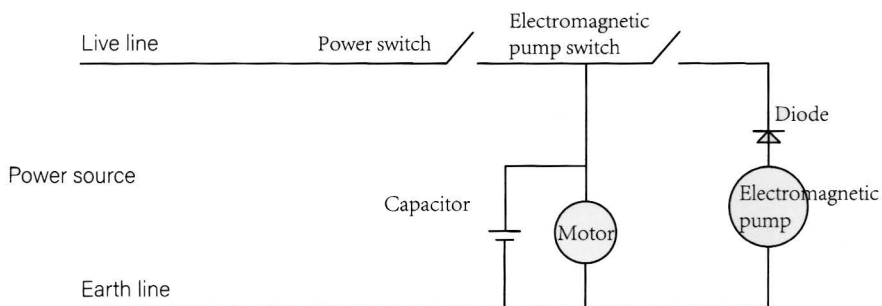

Product specification parameter

Product model	Rated power supply	Clean tank capacity	Sewage tank capacity
TBC2413	220-240V~, 50-60Hz	1.2L	0.6L

Note: Some of the components labeled "X" above contain harmful substances that exceed the standard due to the limited technical level of the current industry, which cannot be replaced or reduced temporarily.

 <p>Hazardous substances restriction sign</p>	<p>Environmental protection term 10 years: indicates that the harmful substances contained in this product will not leak or mutate, and the user will not cause serious pollution to the environment or serious damage to personal property when using this product normally under the circumstances described in the product manual;</p> <p>Arrow loop sign: indicates that the product can be recycled. After the use period is exceeded or the maintenance of harmful substances can not work normally, it should not be discarded at will, and it should be handed over to the regular recycling channel system to use signs and enterprises with waste electrical and electronic products disposal qualifications.</p>
--	---

After-sales service


● Performance pledge

If there is a problem with the product, please contact our customer service center.

Not covered by warranty:

- Damaged due to improper handling, use, storage and maintenance by the user, or artificially damaged by maintenance personnel not designated by the company, or the user's own disassembly and maintenance;
- Use of gifts and accessories that are not standard for our products, causing damage;
- The model of the invoice does not match the model of the repaired product or is altered;
- Out of warranty period;
- No valid invoice;
- Damage due to force majeure;
- Products that are not covered by warranty will be serviced for a fee.

SPOT VACUUM CLEANER

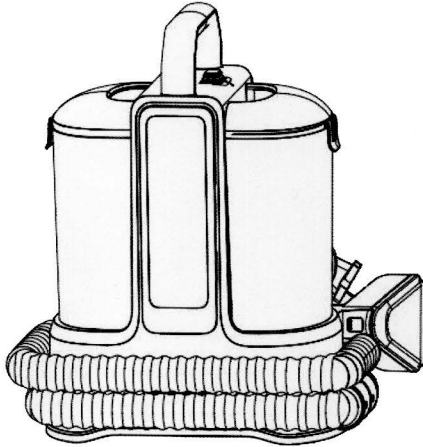

Installation video




Q&A video




Fabric Cleaner Operation Guide


Step 1

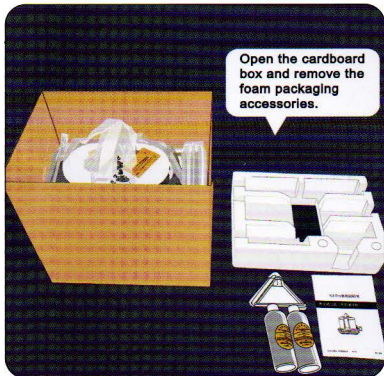


Step 2

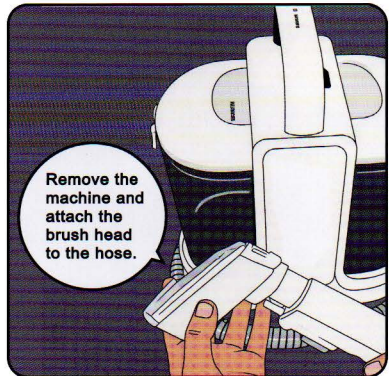


Step 3

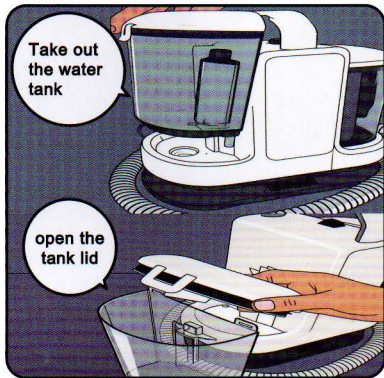

Step 4

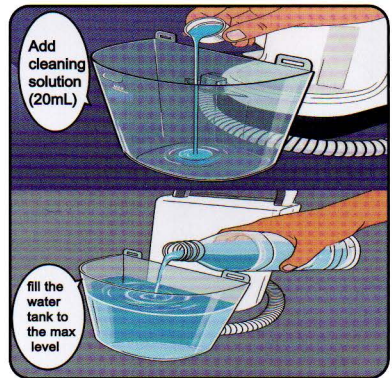


Step 5

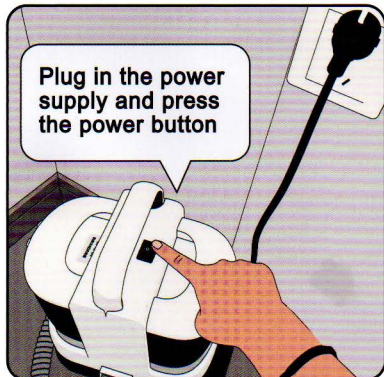


Step 6




Step 7

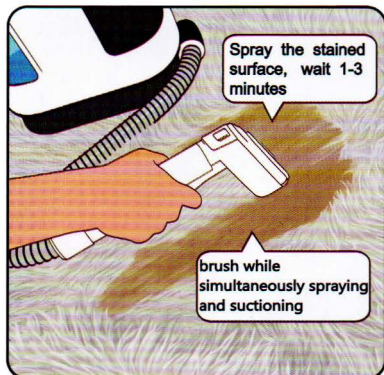

Step 8

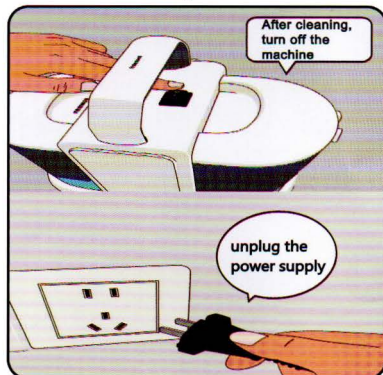

Step 9

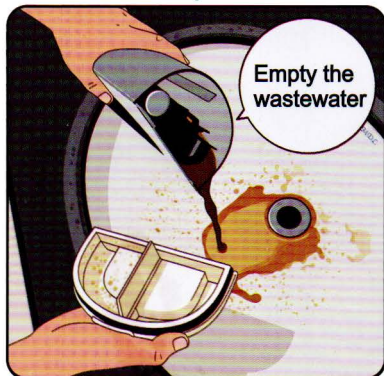

Step 10



Step 11

