

**FOR USE BY COMPETENT PERSONS**








Anyone using this instrument should be knowledgeable and trained about the risks involved with measuring voltage, especially in an industrial setting, and the importance of taking safety precautions and of testing the instrument before and after using it to ensure that it is in good working condition.

**FLUKE®****1AC II  
VoltAlert***Instruction Sheet***Read First: Safety Information****⚠⚠ Warning**

To avoid possible electric shock or personal injury:

- If the Tester is used in a manner not specified by the manufacturer, protection provided by the Tester may be affected.
- Do not use if VoltBeat is not flashing.
- Test on a known live source within the rated ac voltage range of the product, both before and after use to ensure unit is in good working condition.
- When using the Tester, if tip does not glow, voltage could still be present. The Tester indicates active voltage in the presence of electrostatic fields of sufficient strength generated from the source (MAINS) voltage. If the field strength is low, the Tester may not provide indication of live voltages. Lack of an indication occurs if the Tester is unable to sense the presence of voltage which may be influenced by several factors including, but not limited to:
  - Shielded wire/cables
  - Thickness and type of insulation
  - Distance from the voltage source
  - Fully-isolated users that prevent an effective ground
  - Receptacles in recessed sockets/ differences in socket design
  - Condition of the Tester and Batteries
- Do not use if the Tester appears damaged or if the Tester is not operating properly. Specifically examine the probe tip for cracks or breakage before use. If in doubt, have the Tester serviced.
- Do not apply more than the rated voltage as marked on the Tester.
- Use caution with voltages above 30 V ac as a shock hazard may exist.
- Comply with local and national safety requirements.
- Use proper protective equipment as required by local or national authorities.

**Table 1. Symbols**

	Double Insulated.
	Hazardous Voltage. Risk of electric shock.
	Risk of danger. Important information. See Instruction Sheet.
	Conforms to relevant Canadian and US Standards.
	Conforms to relevant European Union directives.
	Conforms to relevant Australian standards.
	Do not dispose of this product as unsorted municipal waste. Go to Fluke's website for recycling information.
<b>CAT IV</b>	Equipment is designed to protect against transients from the primary supply level. (i.e. - electricity meter or overhead /underground utility service).

**Safety Compliance:** Meets IEC 61010-1:2001, UL 61010-1 (2nd ed.), CAN/CSA-C22.2 No. 61010-1-04, and ISA-82.02.01

**EMC Compliance:** Meets IEC 61326-1:2006

**Operating:** 90 V ac to 1000 V ac (A1/A2), 200 V to 1000 V ac (E1/E2/P1), 20 V to 90 V ac (LAC)

**Temperature:** Operating: -10 to 50 °C Storage: -10 to 50 °C

**Humidity:** 0 % to 95 % (0 to 30 °C)

**Altitude:** 3000 m

**Pollution Degree:** 2

## **Operating Instructions**

### **Turning the Tester On**

Momentarily press the green button. Listen for a double beep to confirm activation. A continual VoltBeat flash visually indicates the Tester is active.

### **Turning the Tester Off**

Press and hold the green button for more than half a second. Listen for a long half-second beep to confirm deactivation of the Tester. The absence of the VoltBeat flash indicates the Tester is inactive.

### **VoltBeat (System Self-Test)**

VoltBeat is a self-test feature for visual confirmation of battery and system integrity, and power on. It provides a double-flash every two seconds during normal operation.

### **Checking for the Presence of AC Voltage**

Placing the tip of the unit near an ac voltage produces a steady glow at the tip and, if enabled, a continual beep.

### **Auto Power Off**

After about five minutes of non-use, the Tester automatically powers off to save battery life. A double beep, followed by a longer, single beep, provides audible indication that the Tester has powered off. The absence of the VoltBeat flash serves as a visual power-off indication.

### **Disabling the Beeper**

Disable the beeper by holding the green button down for more than two seconds during power up. To enable the beeper again, turn the Tester off, and then turn it on.

### **Low Battery Indication**

When the battery voltage drops below two volts, VoltBeat provides visual indication by stopping the VoltBeat flash. Replace with two AAA (LR3) batteries.

### **Cleaning**

Clean with damp cloth.

### **Contacting Fluke**

- Technical Support USA: 1-800-44-FLUKE (1-800-443-5853)
- Calibration/Repair USA: 1-888-99-FLUKE (1-888-993-5853)
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Anywhere in the world: +1-425-446-5500

Or, visit Fluke's website at [www.fluke.com](http://www.fluke.com).

To register your product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit <http://us.fluke.com/usen/support/manuals>.

### **LIMITED WARRANTY AND LIMITATION OF LIABILITY**

This Fluke product will be free from defects in material and workmanship for two years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands

The electronics specialist

# maplin

Perry Barr - 0333 400 9709 - [www.maplin.co.uk](http://www.maplin.co.uk)

## SALES VOUCHER

---

Date: 09/02/17 15:02 Ref: 68081 TID: XXXX5577

Card Type: Visa Debit

Merchant ID: XXX95853 AID: A0000000031010

Card No: XXXXXXXXXXXXX1316 Rcpt: 1857

PAN Sequence No.: 00

Auth Code: 006202 ICC

PIN VERIFIED

PAYMENT £24.99

TOTAL £24.99

Please debit my account with amount shown.

**\* CARDHOLDERS COPY \***

Please keep this copy for your records.

The electronics specialist

# maplin

Perry Barr - 0333 400 9709 - [www.maplin.co.uk](http://www.maplin.co.uk)

Date: 09/02/17 15:02 Asst: 23838 Store: 245 Txn: 1/136839

Qty Code	Description	Loc	Tax	Each	Total
1 A340X	Fluke Volt Alert	W022	L	24.99	24.99

VAT Summary - VAT No: GB 772 3124 44 Total £ 24.99

Code	Nett	Rate	VAT	
L	20.825	20.00%	4.165	
				Card £ 24.99

Card No: XXXXXXXXXXXXX1316 Exp: 0101

You were served by DAVID

Thank You For Shopping At Maplin Electronics

Follow us on twitter at @Maplin\_PRY

Registered in England, No. 1264385. Maplin Electronics Ltd,  
Brookfields Way, Manvers, Rotherham, S63 5DL.



M E V I Z F C Q G 9